


TMK Equipment Rental and Lease, Inc.

320 Communications System Control Summary

320 Master Unit

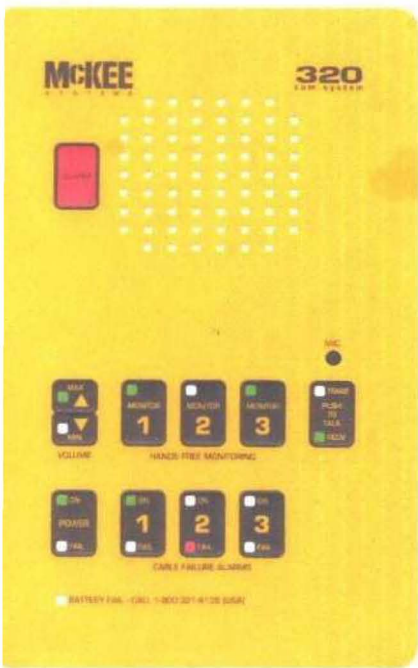

320 Phone Unit



"POWER" Switch; Green LED indicates system power on. If input power is not present, a alarm will beep every 30 seconds for 4.5 minutes then system will turn off.



"POWER FAIL" LED flashes red when primary power input is lost, indicating system being powered by internal backup battery.



MONITOR Switches; Green light indicates a Phone Unit is on Hands-Free monitoring. The Operator can hear the monitored Phone Unit. The Signal Person does not press the "TALK" switch to communicate with the Master Unit. Phone Units that are not being monitored will be heard by the Master Unit and the Phone Unit's not on monitor only when they press the "TALK" switch.



"PUSH TO TALK" to Phone Unit not in monitor mode.



Press Alarm to send an alert tone to Phone Units.



Press both switches to override Signal Person voice communication if they are pressing the "TALK" switch on the Phone Unit.



High and Low Volume switches. LED's indicates status of volume



Cable failure monitoring is automatically activated when a Phone Unit is connected, and CANNOT be turned off while Phone Unit is connected. Green LED indicates the cable connection is OK. When the Phone Unit is disconnected or a cable is cut, a red fail light located in the switch flashes and a beeping tone sounds.



RED LED indicates backup batteries are low. If the LED does not go out within 3 minutes do a fast charge. If the LED is still RED after the fast charge return the unit for service.



FAST CHARGE: With power OFF and input power supplied to Master Unit first press hold "1 FAIL" then press "POWER" release the both switches. When the Unit sounds 3 short beeps the unit is fast charging.



"PUSH TO TALK" when Master Unit is not in monitor mode. When Master unit has a Phone Unit in monitor mode communications to the operator is hands free.



Press Alarm to send an alert tone to Master Unit and other Phone Units. Press and hold for at least 2 seconds to put the Phone Unit into monitor mode.



POWER: GREEN LED indicates power on.

ALARM: RED LED indicates cable failure or other Phone Unit disconnected.

TRANSMIT: GREEN LED on When Phone Unit is transmitting. Either the Unit is in monitor mode or the being pressed

"TALK" switch is